

# STEELMAN™ PRO

79379

## MULTI-MODE FOCUSING RECHARGEABLE HEADLAMP

**NOTE: CHARGE HEADLAMP FOR 8 HOURS BEFORE INITIAL USE.**

### CHARGING INSTRUCTIONS:

1. Remove the rubber cover from battery box and fully insert micro USB plug into micro USB jack.
2. Plug the regular USB end into the wall adapter then into 110-120VAC outlet. The LED will illuminate RED.
3. LED indicator will turn GREEN when fully charged.

### OPERATION:

1. Depress and release power switch to turn headlamp on. Pressing again within 5 seconds will toggle through each mode. If the headlamp remains in any mode for longer than 5 seconds, the next press of the power button will turn the headlamp off. There are 3 modes: Headlamp, Area Light, and Combo.
2. In Headlamp mode, depressing and holding power switch will engage Boost Mode. Boost Mode increases the light output to the maximum level for as long as the power switch is held.
3. In any mode, quickly depress and release power switch twice to engage the motion sensing power switch.
4. When the motion sensing power switch is active, the power switch will be illuminated and the headlamp can be switched off and on by waving your hand in front of the motion sensor. The motion sensor is located directly below the power switch.
5. To turn off the motion sensing power switch, depress and release the power switch once.
6. To activate the RED Safety LED, depress the white button on the battery housing. Press once for solid RED LED, press again for blinking RED LED. Press a third time to turn off.

### FOCUSING ADJUSTMENT:

To adjust the focus of the headlamp, twist and rotate rubber bezel to focus or flood headlamp light beam to desired pattern.

### PITCH ADJUSTMENT:

Tilt LED panel up and down to desired light angle.

### HARD HAT CLIP USE:

1. Fit headlamp over hard hat to desired position.
2. Flip down metal wire hook on the headlamp strap clip and hook onto brim of the hard hat.

**CAUTION: DO NOT DISPOSE IN FIRE • DO NOT DISASSEMBLE OR SHORT CIRCUIT • DO NOT INSERT BATTERY REVERSED • DO NOT INCINERATE BATTERY OR DEFORM POSITIVE CAP • DO NOT MIX WITH DIFFERENT BATTERY TYPES • CHARGE ONLY WITH THE SPECIFIED CHARGER • REMOVE BATTERY FROM DEVICE WHEN NOT IN USE FOR LONG PERIOD OF TIME • PLEASE DISPOSE IN BATTERY RECYCLE BIN**

### ONE YEAR LIMITED WARRANTY

This product is backed by a one year limited warranty. This warranty covers manufacturer defects and workmanship. The warranty excludes misuse or abuse and normal wear and tear.

JS PRODUCTS | 6445 MONTESSOURI STREET | LAS VEGAS, NV 89113  
800.255.7011 | FAX: 775.898.8773 | WWW.STEELMANPRO.COM