

Charging the Docking Station and Headphones

To charge the docking station, use the two port USB charger and one charging cable. The user may choose to charge both the headphones and the docking station at the same time if desired by plugging both USB cables into the charger. Plug the male end of the charging cord into the docking station to the left of the color coded channels where it says 5 VDC. The red light indicator should light up to the left of the battery to indicate the docking station is charging. When the docking station is fully charged, the battery indicator light will turn off. Allow 4 hours for the battery to get fully charged.

To charge the Bluetooth wireless headphones, use the two port USB charger and one charging cable. The user may choose to charge both the headphones and the docking station at the same time if desired by plugging both USB cables into the charger. Plug the male end of the charging cord into the USB female end slightly above the power button on the headphones. The battery light will light up red signifying that the headphones are charging. When the headphones are fully charged, the battery indicator light will turn off. Allow 3 hours for the battery to get fully charged.

This device complies with part 15 of the FCC Rules Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However, there is no guarantee that the interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

Designed in Las Vegas, NV

Made in China

Apple, the Apple logo, iPhone, iPad, and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc.

Steelman®PRO SmartEAR™2 is backed by a 90 day warranty. This warranty covers manufacturer defects and workmanship. The warranty excludes misuse or abuse and normal wear and tear. Exclusion is not allowed in some states and may not apply. This warranty gives you specific legal rights, and you may have other rights, which vary from state to state.



91929
SmartEARTM 2
NOISE & VIBRATION DETECTION

USER GUIDE
for iPhone®, iPad®, and iPod touch®

STEELMAN[®] PRO



TABLE OF CONTENTS

Use of Steelman®PRO SmartEAR™2	1
Initializing App and Landing Screen	2
Interface Help and User Information	3
Sound Mode	4
View Mode	5
Pairing Headphones	6
Expanded Screen View	7
Ambient Sound Reset and Offset	8
Settings	9
Equalizer	10
Assigning Clamp Locations	11-12
Removing Custom Clamp Locations	13
File Recording	14
File Playback	15
File Sharing and Changing File Name	16
Deleting Recordings	17
Charging Instructions	Back Cover

Deleting Recordings

- From the saved recordings screen, events can be selected by tapping on the text area of the file name
- The text background will highlight red
- Tap **DELETE** button to delete the selected recording




SAVED RECORDINGS SCREEN


File Sharing and Changing File Name

Note: The default file name for saved files will be a time and date stamp

- To change the file name of the event, select to highlight the event to be renamed and tap the **EDIT** icon, type the new name of the file and tap the **Save** button
- After successfully saving the file, simply choose the **EMAIL** button option and populate the TO: field and hit the **Send** icon

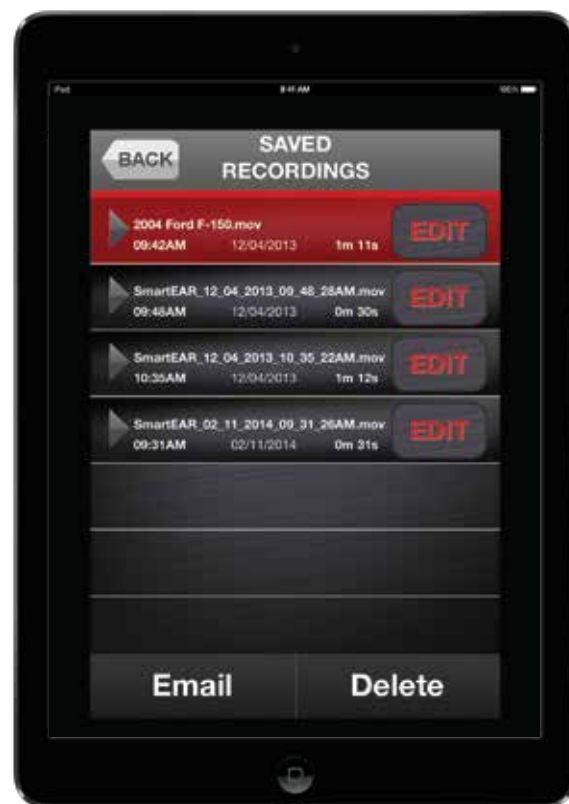

SAVED RECORDINGS SCREEN

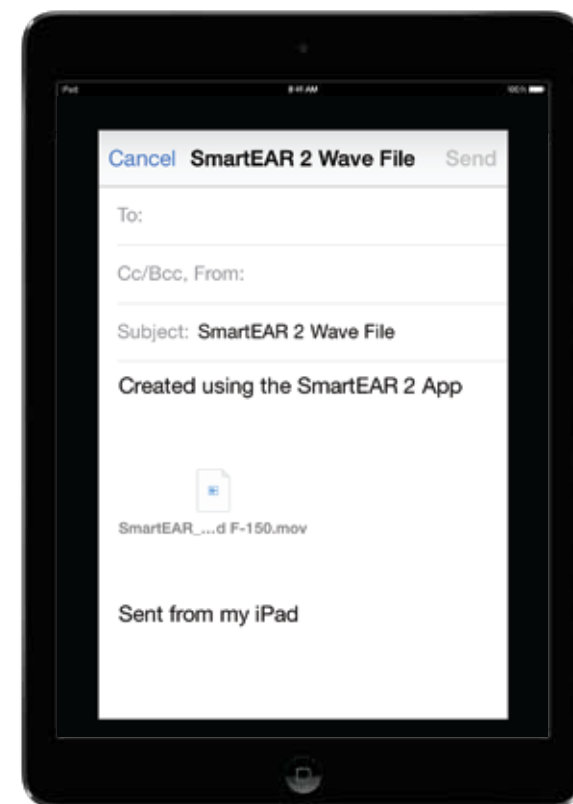

EMAIL RECORDING SCREEN


Use of SmartEAR™2

- After completing the initial set-up, you can begin analyzing and pinpointing the location of the noise or vibration sounds that you are attempting to diagnose
- SmartEAR™2 hardware kit and app will easily help to locate noise or vibration in a troubled area
- SmartEAR™2 utility application is available on the App StoreSM



NOTE: Before attaching hardware to your iPhone®, iPad® or iPod touch®, please see Quick Set-up Guide

Initializing App and Landing Screen

- To initiate application, tap the Steelman®PRO SmartEAR™2  icon from the home screen of the iPhone, iPad, or iPod touch
- Once the application has finished loading, it will take you to the landing screen, the user will be able to navigate throughout the app and adjust settings from here



LAUNCH SCREEN



LANDING SCREEN





SAVED RECORDINGS SCREEN







RECORDING PLAYBACK SCREEN

File Playback

- Tap  icon to access all sound files
- Once you have finished recording, you then have the ability to review your sound file that was automatically saved to the iPhone, iPod touch, or iPad
- To play back an event, tap the  icon




File Recording


- From the landing screen during a test drive or diagnostic test, the event can be recorded and will automatically save to memory on the saved recordings page (see page 16)
- To record the event, press the  icon on the landing screen
- Press the  icon to stop while recording (this will end recording the event)
- Press the  icon to pause recording the event, and press the  icon again to resume recording the event
- The files can be played back immediately, archived to build a database, shared with another technician, or emailed to a customer as confirmation that a repair is needed or that one has been completed



RECORDING SCREEN

Interface Help and User Information

- For user interface or reference information, tap the settings  button, then select the INFORMATION or HELP icons from the settings screen
- Additional reference information for sound comparison and tips on use of the application can be found here
- Tap  icon from the settings screen for the HELP screen
- Tap  icon from the settings screen for the INFORMATION screen

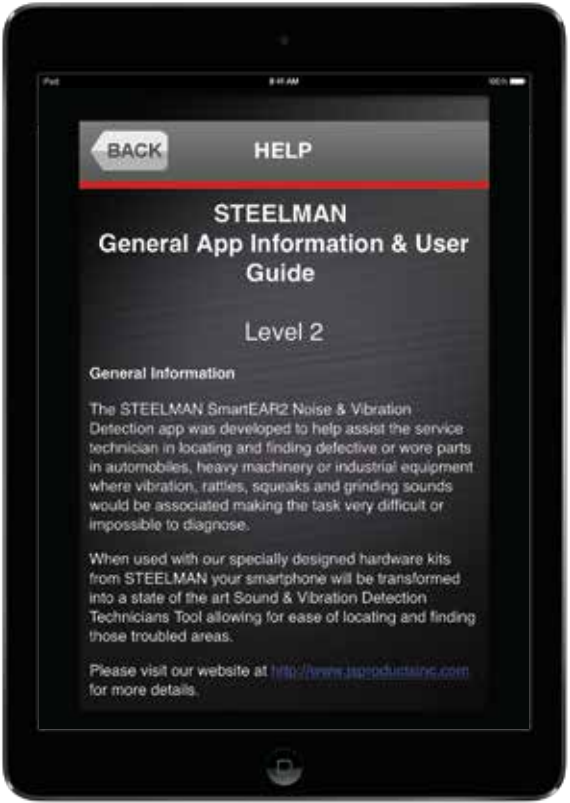



HELP SCREEN



INFORMATION SCREEN

Sound Mode

- Select either the Sound Wand or the Sensor Clamp mode, depending on the type of the diagnostic testing required
- To enable the Sound Wand, tap and hold the microphone  icon until it highlights
- To enable the Sensor Clamp, tap and hold the clamp  icon until it highlights




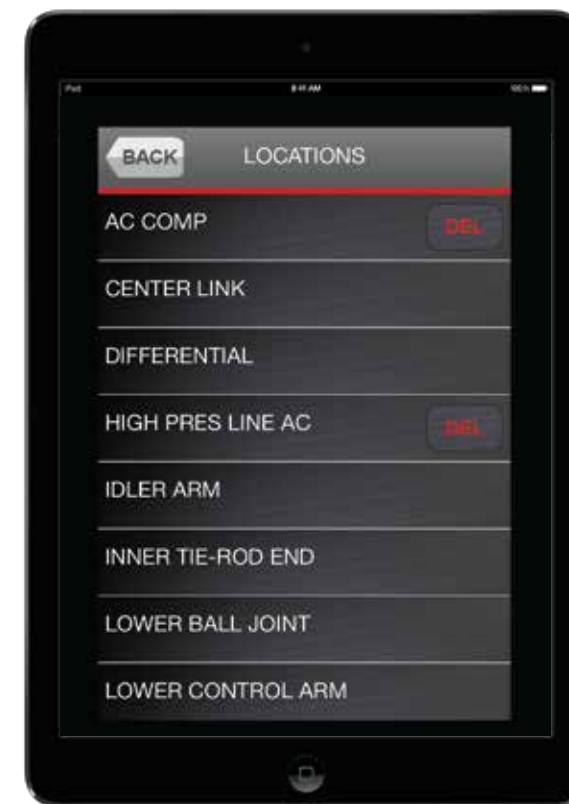
SOUND WAND




SENSOR CLAMP

Removing Custom Clamp Locations

- Custom location descriptions are saved to the pull down menu automatically and placed in alphabetical order
- If desired, custom location descriptions can also be deleted from the pull down menu if no longer needed
- Tap  button for the corresponding position that needs to be deleted from the locations list




LOCATION DESCRIPTIONS LIST

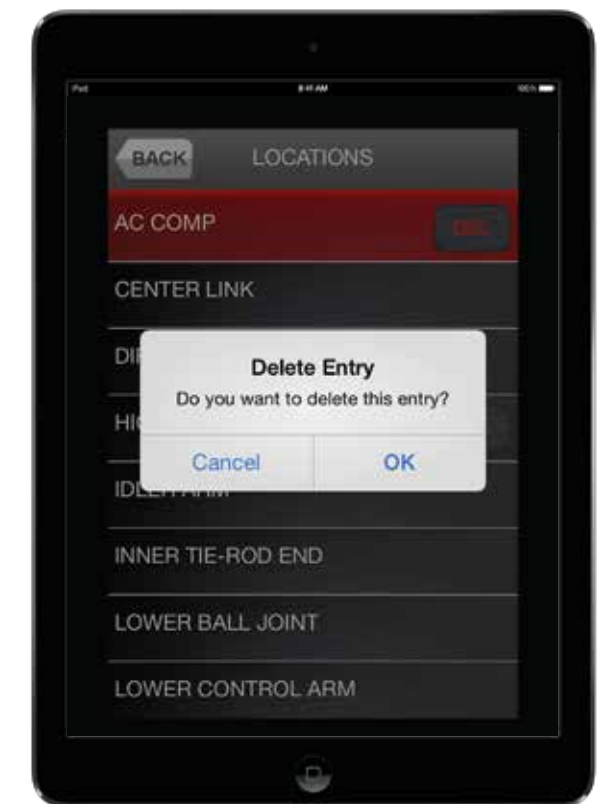


DELETE ENTRY CONFIRMATION

Assigning Clamp Locations

- Tap the text box again on the location assignment screen to access preloaded locations from the location pull down menu screen
- You may create a custom location by scrolling to the bottom of the list and selecting Other (specify)
- Once a specific location has been selected or created from the Other (specify) selection, tap on the general location of the clamp on the location assignment screen (tap to select Front, Left-Front, Right-Front, Left-Rear, Right-Rear, or Rear)
- Tap **OK** button to return to the channels screen
- Create clamp locations for each of the other corresponding channels to be used in the test in the same manner as previously described
- To reset all clamp location names, tap the  icon to clear all previously selected locations
- When finished assigning channel locations, tap **BACK** button to return to the landing screen




LOCATION ASSIGNMENT SCREEN

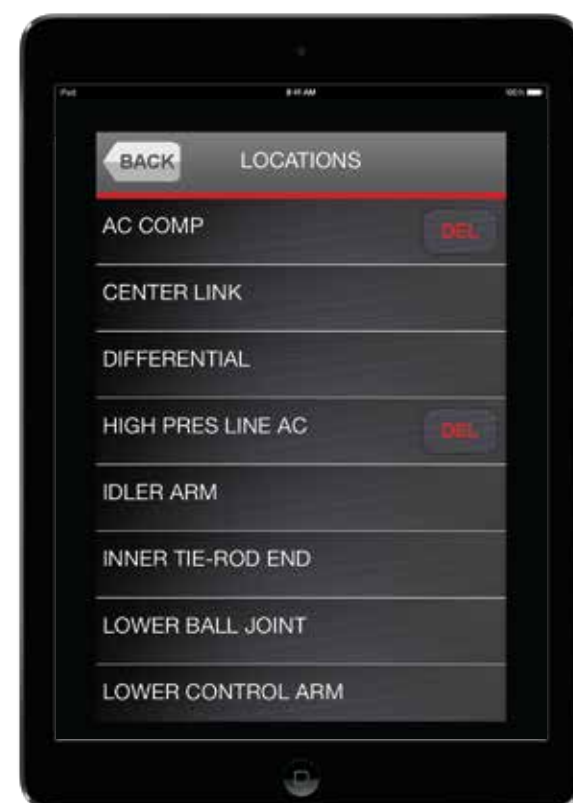

LOCATION PULL DOWN MENU SCREEN

View Mode

- After selecting the mode of operation, select the desired viewing mode (there are two viewing modes: Analog and Digital)
- Tap  button to change between views



ANALOG GAUGE



DIGITAL GAUGE

Pairing Headphones

- Switch power “ON” for docking station, be sure system is fully charged
- Hold power button on wireless headphones until you hear a beep (be sure when troubleshooting that you are listening to the correct channel)
- Docking station and headphones will pair up together automatically
- If pairing is unsuccessful, further setup may be required
 - (a) To initiate pairing mode for the wireless headphones, restart headphones then press and hold the power reset button until LED indicator flashes Red and Blue rapidly
 - (b) Next initiate pairing mode on the docking station by pressing the pairing button located next to the USB charging port until Blue LED pair indicator flashes rapidly
 - (c) Once the wireless headphones and docking station have paired, the LED indicators will change to slow blue flashes signifying the pairing was successful
- Once docking station and headphones have paired successfully, the hardware is now ready for use



DOCKING STATION TOP PORTS




WIRELESS HEADPHONES



DOCKING STATION




Assigning Clamp Locations

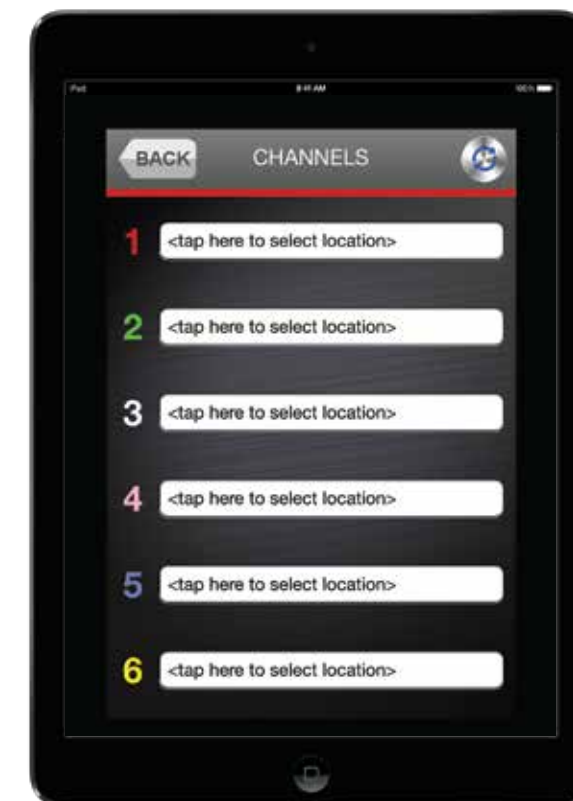- From the settings screen or landing screen, tap **CH** button to access the channels screen
- Tap **1** text box to access the location assignment screen for clamp 1



CHANNELS SCREEN



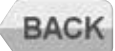
Equalizer

- From the settings screen, you can also access the built-in 10-Band Equalizer where individual frequency level audio signals can be adjusted
- Tap  icon to access the 10-Band Equalizer controls
- After making manual adjustments to the equalizer, the application can be reset to the default values at any time by tapping the  icon
- Tap  button after equalizer settings have been adjusted



EQUALIZER SCREEN

Expanded Screen View

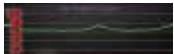- By double tapping the lower portion of the landing screen, you may choose between two expanded views: Analog Waveform or Digital Bar Graph
- Double tap lower screen  for Analog Waveform when Analog mode is engaged
- Double tap lower screen  for Digital Bar Graph when Digital mode is engaged
- Press  button to return to the landing screen







ANALOG WAVEFORM



DIGITAL BAR GRAPH



Ambient Sound Reset and Offset

- Tap  button for ambient sound reset (this is recommended for areas where there is excess or disruptive background noise)
- Tap  button again for ambient sound offset (this will restore sound settings to location when originally powered)
- Tap  icon for automatic default reset
- Tap the  button until the desired channel for the corresponding clamp that you would like to listen to and see visual output for appears on the channel indicator



LANDING SCREEN

Settings

- From the landing screen, tap the settings  button for control settings
- The refresh rate can be fine-tuned depending on how the user would like to see the output (the higher the refresh rate the slower the visual output)
- The offset settings can be fine-tuned to the user's specifications depending on background noise
- The volume can be adjusted manually by moving the slide bar under the volume heading
- Tap  button again to return to the landing screen



SETTINGS SCREEN